


## TDS – Information Sheet - 06

### Full Depth Asphalt Finish Patching

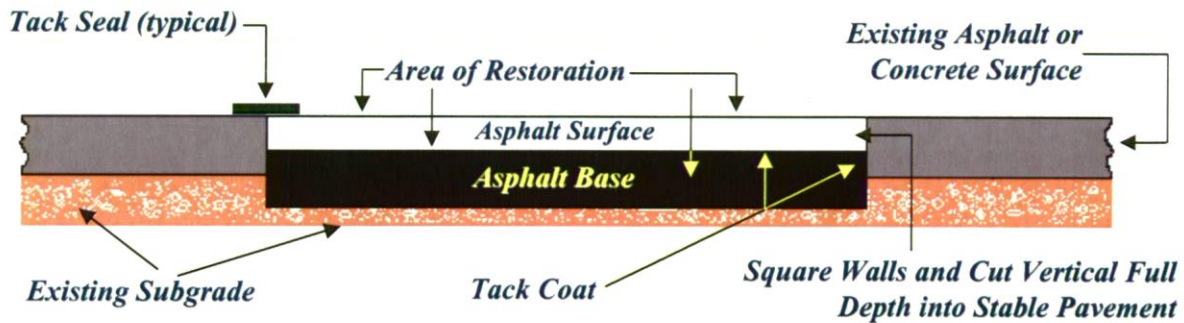

#### SCOPE:

- Lay out and mark all areas of repair.
- Excavate areas to be repaired to a depth of **6"**. Dispose of all debris off-site.
- Square surface of repair and cut walls of repair to produce vertical edges.
- Roll existing sub-grade materials to achieve maximum density.
- Mechanically apply liquid asphalt tack coat to all vertical edges of repair.
- Install **4"** of hot mix asphalt base course material.
- Roll asphalt base course to achieve a true, firm finish.
- Tack coat surface of asphalt base course to provide proper bonding of the new surface course.
- Install **2"** of hot mix asphalt surface course material.
- Roll surface course to achieve a true and firm finish matching existing grade.
- Apply seal of liquid asphalt to the adjoining edges of the finished repair to help prevent moisture penetration.

